



Pushchair Stroller with swivel handle bar

The pram is intended for children from the age of **0-3 years** and an approved weight to **15Kg**.

The pram meets the EU safety standards
EN 1888: 2002 + A1: 2005 + A2:2005 + A3: 2005

The Baby carrier (car seat) meets the safety standard ECE 44/04

Please read all instructions carefully before using your pram and keep it on for future reference and feedback. If you do not follow these instructions you may impair the safety of your child.

If you do not understand the instructions and need more information, please contact your dealer.

Make sure that other users are aware of the functions of the car and the safety.

Table of content

Congratulations.....	2
Assembly instructions.....	2
Build up your pram.....	2
Attach the seat extension.....	3
Adjust the push bar.....	3
Safety Belt.....	3
Brakes.....	3
Adjusting the seat back.....	4
Adjusting the height of the push handle.....	4
Folding the pram.....	4
Pushchair.....	4
Adjusting the foot rest.....	5
Car seat.....	5
Dismantling the car seat.....	5
Care instructions.....	5
Maintain the fabric pieces.....	5
Maintenance of the chassis.....	5
Loss of air wheels.....	6
For the safety of your Child.....	6
Quality agreement.....	6
2 years warranty.....	6
Warranty in case of complaints.....	7
No warranty.....	7
Use, care and maintenance.....	7

Congratulations

So that the baby feels safe and secure, you have chosen a quality product from the house of lux4kids and therefore you made a very good choice. High quality workmanship and ongoing quality control systems give you the security that you have a stroller for a very long time. The use of textiles tested for harmful substances guarantees you the safety of your baby.

Assembly instructions

Build up your pram

1. Pull the frame upwards on the handlebar until it snaps into the right place.
2. Be sure that the brakes are not in braking position. The parking brake must be pulled upwards.
3. Press the button on the wheels and push it on the axles until you hear a silent click – now release the button. Now check the wheel if it sits firmly.



Recommendations: The wheels and axles should be kept clean and a regular use of machine oil (WD40) on wheels and axles is recommended.

Attach the seat extension



Caution: The seat extension must always be removed before collapsing the pushchair. Otherwise it will be damaged.

Adjust the push bar



Pull both catches and swing the push bar to required side

WARNING: Before use, make sure that the securing mechanism is correctly engaged and is firm.

CAUTION: Any pressure on the push bar has a negative affect to the stability of the pram. Never use your pram on stairs. The Handlebar, especially the mechanism of the swivel slide could be damaged, when you pull your child upwards to the stairs.

Safety Belt

The pushchair is equipped with a 5-point safety belt. It can be adjusted separately at the waist, over the shoulders and between the legs.

WARNING: Use the safety belt when the child starts to sit down.
Always use the central and waist belts together

Brakes

Press the brake system located on the chassis using your foot. The brake will engage in the teeth. To release, simply lift the brake lever with your foot.



Make sure that the pushchair is actually at a standstill before applying the Brake. Otherwise the brake mechanism can be damaged.
Before use, check that the attachment connections are firm. The pushchair will only be secure when all connections are engaged correctly.

Adjusting the seat back

To adjust the seat back, pull up the lever behind the seat back. Move it to the required position and then release the lever. Please check that the seat is firmly locked into place.



Adjusting the height of the push handle

Grasp the push handle with two hands and press the two buttons at the wide part simultaneously, ideally using your thumbs, and adjust the height as required. Release the buttons after adjustment.



Folding the pram

1. Remove the seat extension
The seat extension must always be removed before the pushchair is folded. Otherwise it will be damaged
2. When folding, push the seat back into horizontal position
If the seat back is not in a horizontal position before folding the recliner mechanism will be damaged
3. At the same time, simultaneously pull towards you the elements on both sides that secure the push handle and fold up the pushchair. The pushchair will only fold up if the push handle is located behind the hood



Pushchair

Dismantle the seat extension and attach the safety bar.

Attach the safety bar for the pushchair on the front part of the pushchair. To lock, simultaneously press the two buttons in the arm rests and slide the safety bar in until it locks into place.



Move the seat back to the required position.
Move the calf support to the required position.

Adjusting the foot rest

There are elements on both sides under the foot rest for its adjustment. To change the position, push both elements simultaneously and regulate the position of the foot rest.



Car seat

The car seat can be easily mounted on the stroller. Remove the two plates on the both sides. Now you can place the car seat onto the pram in driving position

Dismantling the car seat

On both sides of the car seat is a lever, pull it on both sides at the same time and you can remove the car seat from the pram.

Care instructions

All materials are easy to maintain

Maintain the fabric pieces

To clean dirty fabrics use only a clothes brush or clean water (dry with a hair dryer), avoid hard rubbing. Stubborn stains can be removed with a mild detergent. If you ever get in a heavy rain, dry your pram with stretched fabrics in a warm dry room, to avoid moisture in the inner fabric. A guaranteed weather protection is only grant when you use our rain cover. Besides our positive qualities, our fabrics react to intense solar radiations. Therefore we recommend that you park your pram in the shade.

Maintenance of the chassis

The chassis requires a special maintain. The axles must be cleaned up every 4 weeks and then use machine ole (wd40). Moving parts can be kept functional by using silicon spray A squeaking chassis can so be prevented. Chrome-plated parts and metal parts must kept clean and can be maintained by using car polish if necessary. Small pain damages on the frame must be wiped immediately with a pain pen to avoid rust. Screws on the frame should be checked every month and maybe re-tightened.

Never use a pressure washer, ball bearings of the wheels and functional parts can be destroyed (Grind- and squeaking noises)

Wheels: Caution to the right pressure on the tires. A sufficient air pressure can damaged the rim. The pressure must be between 0,8 and max. 1,2 bar

WARNING! The max pressure filling is quickly reached, an excess can lead to accidents an injuries. The plain-wheel bushes and the springs have to be renewed on time. Avoid a

longer parking of pneumatic tires on light PVC or linoleum floors. Because of all rubber tires on the market can cause discolorations. Small pebbles in the rubber wheels can also damage the flooring. Our wheels are under pressure, so direct solar radiation and the stowing in the luggage compartment under pressure at temperatures above 45°C can flatten or crush the filled tire.

Loss of air wheels

To prevent a total loss of air and a wobbling of the wheels. Half fill the wheels and then set up the mature coat until the wheel runs smoothly. Finally pump up the wheels until max.

For the safety of your Child

 **WARNING:** Check that the pram is not damaged and no parts are cracked or broken before us it.

 **WARNING:** Never leave your child alone in the pram.

 **WARNING:** Before use check that all locks are closed

 **WARNING:** Driving on stairs or steps, a heavy load can damage your pram and bring your child in danger

 **WARNING:** Your stroller must be fixed any time you set it up. Be careful in public transporters to secure the footing

 **WARNING:** pram, pushchair and carrier bags are no bed or cradle replacements and can only be used for traveling and transporting children.

 **WARNING:** Make sure, that your child is not nearby the pram when you unfolding it.

 **WARNING:** Don't let your child play with the pram.

 **WARNING:** Any load attached to the handle affects the stability of the stroller.

 **WARNING:** This model is suitable for 1 child.

 **WARNING:** The seat unit, the pram top and the carrying bag can not be used to transport your child in the car.

 **WARNING:** Use a safety belt as soon your child can sit alone.

 **WARNING:** Always use the child restraint.

 **WARNING:** Before use it is necessary to check that the carrycot or the seat unit is correctly engaged.

 **WARNING:** For safety reasons: Only use original accessories and spare parts

 **WARNING:** This product is not suitable for jogging and skating.

 **WARNING:** The seat unit is not for children under the age of 6 month.

Quality agreement

2 years warranty

With this product you have a warranty against your contract partner for 2 years. The warranty period begins with the delivery of the product. Please keep this completed form signed, your sales receipt to prove. The warranty applies to all material and manufacturing defects that are at time of delivery

Warranty in case of complaints

The warranty refers to all material and manufacturing defects existing at time of delivery

No warranty

Damage caused by improper use (see instructions)

Damage caused by faulty installation or commissioning

Damage caused by careless handling or improper maintenance of the purchased goods

Damage due to improper modifications of the purchased item

Use, care and maintenance

The stroller is for transporting children and must be maintained according to the instructions above.

Have fun with your brand new stroller. Your lux4kids Team!

Your Retailer

Sellex Place

Bövemannstraße 3e

48268 Greven

Tel.: 02571/9195720

Fax: 02571/91957210

lux4kids Store

Hammerstraße 350

48153 Münster

Tel.: 0251/ 87136739