

MAINTENANCE:

- After each use, clean the stroller with a dry cloth.
- Upholstery can be washed with a soft sponge and warm water (30-40 degrees Celsius) using the washing liquid or soap, the upholstery elements must not be washed in the washing machine.
- When washing do not allow the upholstery absorb too much water,
- Do not expose the stroller for excessive sunlight for long period of time,
- Keep out the stroller from getting soak with rain covers,
- Every 2-3 months clean out the axles from the dirt accumulated during use (mud, sand) and lubricate them with silicon or oil-based lubricant,
- When transporting the stroller be careful not to damage the chassis and particularly the upholstery,
- After using the stroller during snowy or rainy weather, wipe the frame, wheels and axle with a dry cloth.
- Do not store the pram in cold or damp places.

WHEELS MAINTENANCE:

Air pumped wheels:

The slow decrease of the air pressure in air pumped tires is not a defect, as this kind of tire require periodic pumping up. Maximum air pressure must not exceed 0.6 BAR! The manufacturer takes not responsibility for any damage caused by too strong air pumping of the tires.

WHEELS: ATTACHMENT AND DETACHMENT

To attach the wheels to the axles :
Push down the lock pin on the wheel.
Insert the wheel to the end of the axis and release the lock pin.
Pull the wheel gently off, the safety pin should lock into the axle groove with the click, which indicates the correct attachment of the wheel.

WARNING: Check by pulling the correct installation of the wheel.



Turran SILVER

TUTEK TURRAN SILVER INSTRUCTION MANUAL

PLEASE READ THESE INSTRUCTIONS AND WARRANTY BEFORE USE THE PRAM AND KEEP THEM FOR FUTURE REFERENCE. DISREGARD OF WARNINGS IN THIS MANUAL MAY AFFECT YOUR CHILD SAFETY AS WELL AS THE LOSS OF PRODUCT WARRANTY.

SAFETY INFORMATIONS AND WARNINGS:

- **WARNING:** Leaving your child unattended could result in danger.
- **WARNING:** Do not use a mattress thicker than 30 mm
- **WARNING:** Use a harness as soon as your child can sit unaided.
- **WARNING:** The seat unit is not suitable for children under age of 6 months.
- **WARNING:** This product is not suitable for running or skating.
- **WARNING:** To avoid any injuries, make sure that the child is in a distance, during folding and unfolding the stroller.
- **WARNING:** Do not let the child to play with this product.
- **WARNING:** Always use the protection system.
- **WARNING:** Make sure, that the fastening of carrycot, seat unit or car-seat is properly locked.
- **WARNING:** Maximum load for the bag is 1,5 kg.
- Never leave the pram on a slope or an uneven surface, even with the brakes engaged, it may cause the danger of slip.
- Avoid the stairs and other slopes when the child is in the stroller – it creates danger of the child falling out as well as chassis damage for which the manufacturer takes no responsibility.
- This stroller is intended for only one child. The maximum carrying capacity should not exceed 15 kg of the child weight and 5 kg of shopping basket load.
- Use the harness as soon as your child begin to sit unaided.
- Maximum load of stroller bag is 1,5 kg.
- Cross rocking of the pram is unacceptable - it creates risk of the child falling out as well as suspension damage for which the manufacturer takes not responsibility.
- Do not attach any extra bags on the stroller. Any additional load affects the stability of the stroller. For small luggage use only original stroller bags and do not exceed maximum allowed weight of 1,5 kg.
- Do not carry the stroller down or up the stairs holding the chassis or the handle, it creates risk of the child falling out as well as suspension damage for which the manufacturer takes not responsibility.
- Always remove the child before you fold the pram.
- Do not use any additional equipment not listed by the manufacturer.
- Any additional burden on the chassis violate its stability.
- The pram should be carried out safely, the speed of the stroller should be adjusted to the speed of step.
- Do not drive the stroller while skating or roller skating.
- Do not use escalators. Be careful when using a lift when the child is inside the stroller.

IMPORTANT! Before first use of the pram lubricate the wheel axles with a silicon or oil based lubricant

IMPORTANT: Save this manual for the future.

The product complies with the standard PN-EN 1888:2012

**STROMIEC, SALES OFFICE, 26-804 STROMIEC, Białobrzaska 5 Street
tel./fax: 48 619 10 25, biuro@tutek.pl, www.tutek.pl**

Buyer is obliged to release the product or its components required repair to the Guarantor in order to transport them to the Guarantor's plant and repair. The guarantor is not obliged to provide product for replacement to the buyer at the period of performing the warranty obligations.

5-POINT HARNESS

The stroller is equipped with a 5-point safety harness. Straps are adjustable individual sections it means: waist strap crutch strap and shoulder strap. Each of these strips can be adjusted separately moving the sliders located near the main lock.

REMEMBER!

USE A HARNESS AS SOON AS YOUR CHILD CAN SIT UNAIDED.



Fig. 3

Folding the chassis

To fold the stroller pull the locking devices along the both sides of the chassis up to release the lock and move the handles (Fig. 3)



Fig. 4



Fig. 5

Unfolding the chassis

Raise the handle to hear the CLICK of locking elements. (Fig. 4 and 5)

Make sure the connectors are locked.

CARRYCOT AND SEAT UNIT ASSEMBLING

Insert carrycot at an angle (Fig. 1) in the hooks on the front of the chassis then push the carrycot down to the locking fastener.

To release the carrycot unlock the fastener by pushing red locker (Fig. 2) on the both sides of the chassis.



Fig. 1



Fig. 2

To fold the carrycot hood, push the hood down, holding its upper part.

Handle in the hood is designed only for take the carrycot from out of the stroller.

WARNING! Before use the the stroller make sure the seat unit is properly locked in fasteners.



BRAKE

To engage the brake push down the brake lever with the foot in a way to lock the gear wheel which is the part of the stroller rear axle. In order to disengage the brake pull the brake lever up with the foot. (It has adjustable springs)

WARNING!

Before moving the stroller make sure the brake is disengaged (released). The manufacturer do not takes responsibility for damages of gear wheels and other brake system components resulting of disregard instructions above.